# TEKASIL **SANITAR ACETAT**



TEKASIL

SANITAR

ACETAT

upaonice i kuhinju hrooms and kitche

# **PROPERTIES**

- It prevents mould to form on silicone due to special admixture.
- Does not slump in vertical joints.
- Excellent adhesion to aluminium, ceramics, glass, glazed surfaces, profiled glass, klinker and porcelain.
- Good mechanical properties.
- Movement accommodation up to 20%.
- Resistant to atmospheric effects, UV-light and ageing.
- Resistant to various chemicals.
- Not suitable for sealing tinned sheet.
- Releases acetic acid during hardening.
- Long storage life.
- Wide selection of colours (see colour chart).

# **TESTS AND CERTIFICATES**

EN 15651-1:2012 F-EXT-INT-CC - CE marking, EN 15651-2:2012 G-CC - CE marking, EN 15651-3:2012 S - CE marking.

## USE

For sealing joints in rooms where mould can form (bathrooms and basements), for sealing silicate materials (kitchens and bathrooms), for sealing less stressed joints, for installing glass into aluminium frames, for glazing and for profiled glass mounting.

# **TECHNICAL DATA**

Fresh sealant		
Basis		acetic acid silicone
Appearance		paste
Curing mechanism		by air humidity
Specific gravity		950±10 kg/m³
Skin formation time	23°C/50% rel. humid.	20 min.
Hardening time	23°C/50% rel. humid.	2 mm/day
Resistance to flow	ISO 7390	0 mm
Application temperature		between +5°C and +40°C


## Cured sealant

Hardness Shore A Tensile strength Module E 100% Elongation at break Tensile strength

ISO 868 ISO 8339 ISO 8339 ISO 8339 ISO 37

С

15 - 250,40-0,50 MPa <0,4 MPa 200-300% >1,2 MPa

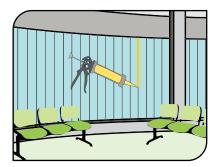

# **Tekasil Sanitar Acetat**

This is an acetate based sealant with permanent elasticity and excellent adhesion to most silicate materials (aluminium, ceramics, glass, glazed surfaces, profiled glass, klinker, porcelain etc.). It is also suitable for use in rooms where mould can form.







- Elongation at breakISO 37Change in volumeISO 10563Elastic recoveryISO 7389Temperature resistanceISO 7389
- >400% >10% >90% between -40°C and +150°C

# APPLICATION

Prior to use it is recommended to perform an adhesion test to verify adhesion of the sealant to the substrate.

Surface preparation:

The surface of the joint must be dry, hard, clean, dust and fat free. Remove all separated and badly attached pieces.

- Joint and cartridge preparation:
- If you want joints to look nice tape the edges with a masking tape.
- Cut the cartridge at the top and screw on the nozzle, which has to be cut according to the width of the joint and placed in the gun. During work interruption or cartridge replacement release the handle on the gun and pull the piston back.
- The sealant should be applied as evenly as possible.
- At the end, use a smoothing tool a TKK smoothing instrument, or a Smoothing agent soaped finger to level the sealant before the skin starts to form. It is very important to press the sealant well against the surface to be sealed.
- Remove the masking tape before the sealant starts to harden.
- Admixture against mould formation washes away with water. Anti-mould effect can be extended by drying the joints and aerate the room well.
- Fresh sealant and tools can be cleaned with the Tekafin cleaner, hardened sealant should be removed mechanically first and then with a cleaner for hardened silicone - Tekapursil S or Apursil.

Joint depth		Joint widt	h (mm)	
(mm)	6	8	10	12
6	8,3	6,2	5,0	4,2
8		4,7	3,7	3,1
10			3,0	2,5
12				2,1

The table shows how many linear metres of joints we can seal with one 300ml cartridge relative to the width and depth of the joint.

# PACKAGING

- 300ml cartridge
- 60ml tube
- 2001 drum
- 600ml, 400ml, 300ml sausage
- other packagings are available by agreement

## STORAGE

24 months in a dry and cold place under 25°C in originally closed packaging.

# HEALTH, SAFETY HANDLING AND DISPOSAL INFORMATION

Additional information on safety, safe handling instructions and personal protective equipment as well as disposal information are available in a safety data sheet. Safety data sheet is available upon request. You can also ask your TKK distributor for a copy.

## WARNING

Instructions contained in this document are based on our research and experience, however, due to specific conditions and working methods we recommend that you perform preliminary tests prior to any application of our products.



Responsible Care